


Headlights

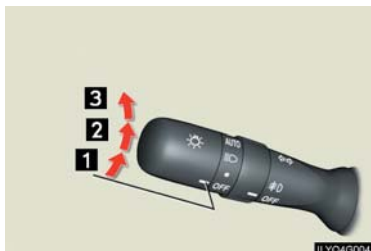

- 1** The side marker, parking, tail, license plate and instrument panel lights turn on.
- 2** The headlights and all lights listed above turn on.
- 3** The headlights and parking lights turn on/off automatically in accordance with ambient light levels.



To engage the high beams, push the lever forward. To flash the high beams, pull the lever and hold.


■ AFS (Adaptive Front lighting System)

AFS improves visibility on curves by automatically adjusting the horizontal orientation of the headlights in accordance with vehicle speed and the degree of the tire angle that are controlled by steering input.



The system can be turned on and off using the AFS OFF switch.

Fog Lights

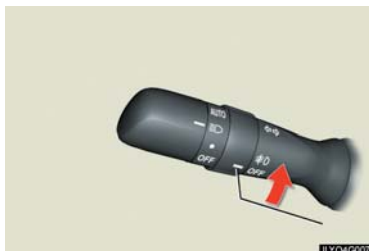

The fog lights can be used only when the headlights (low beam) are on.

Windshield Wipers and Washers

■ Intermittent wiper with interval adjuster (if equipped)



MIST: operates once

INT: intermittent operation*

LO: low speed

HI: high speed

*: Wiper interval can be adjusted by turning the band.

To spray washer fluid, pull the lever.

The wipers will operate automatically.

■ Rain-sensing windshield wipers (if equipped)



MIST: operates once

AUTO: automatic operation*

LO: low speed

HI: high speed

*: Sensitivity can be adjusted by turning the band.

To spray washer fluid, pull the lever.

The wipers will operate automatically

Headlight Cleaner



The headlight cleaner can be used only when the engine switch is in IG-ON mode and the headlights are on.

Rear Window and Outside Rear View Mirror Defoggers



To defog the rear window and outside mirrors, press the button.

Press again to cancel.

The system turns off automatically after 15 minutes.

Instrument Panel Light Control



- 1 Brighter
- 2 Darker
- 3 Maximum brightness
- 4 Changes the cluster glass tint